

Alexa-enabled Waterproof Bluetooth Speaker

Model No.: WB-97
User Manual

1. Introduction

Thanks for purchasing the WB-97, the portable waterproof speaker with Alexa-Enabled. We advise you to read, follow and keep the following instructions in order to be able to correctly set up the speaker and enjoy all of it's features to the fullest.

 
2. Includes

- 1 x WB-97
- 1 x Micro USB charging cable
- 1 x User manual

3. Specifications

Output: 6W Battery: Li-Ion 3.7V/1400mAh
 Input: 5V/1A Unit dimension: 4.3 x 2.1 x 2.9 inch
 Charging time: 2-3 hours Warranty: One-year limited
 Play time: Up to 8 hours (varies by volume level and content)

4. Speaker overview

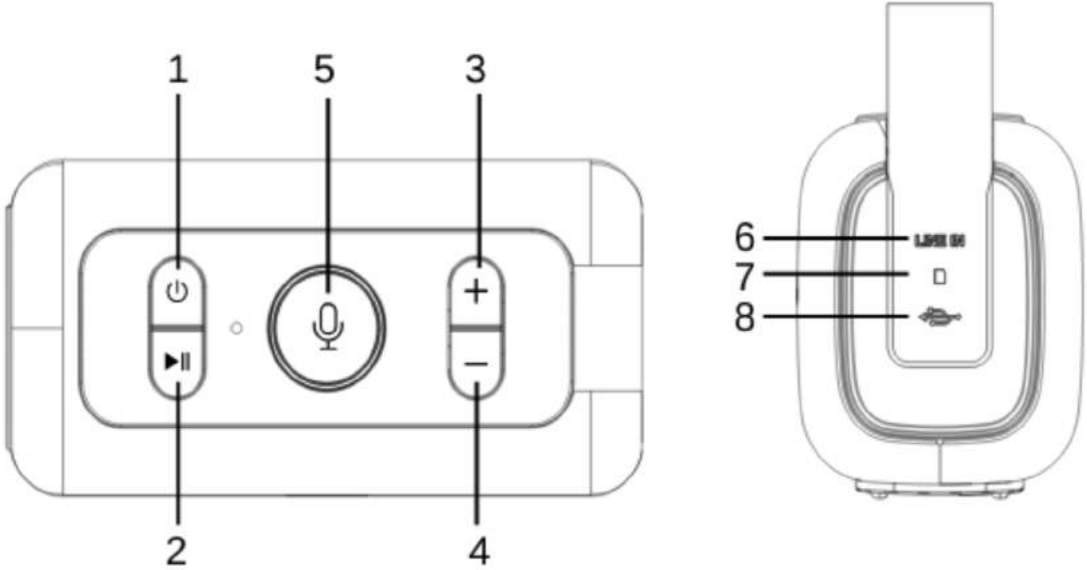

5. Buttons and controls

NO.	Buttons	You want to	How to
1	Power	Turn on/off	Press and hold
		Switch mode	Press
2	Play/Pause	Play/Pause	Press
		Answer/end a call	
		Reconnect	
3	Volume up	Volume up	Press
		Skip to next track	Press and hold
4	Volume down	Volume down	Press
		Go to previous track	Press and hold
5	Wake up voice service	Wake up voice service	Press
6	Line in	Play via line in	Plug in aux cable
7	Micro SD	Play via Micro SD card	Insert the Micro SD card
8	Charging	Charge the speaker	Insert the charging cable

6. Indicators


System state	Indicator state
Power on/paired	Blue light
Bluetooth pairing	Flashing blue light
Wake up voice assistant	Flashing green light
Thinking	Flashing blue and green light
Speaking	Flashing green light
Line in mode	Red light
Micro SD card mode	Green light
Charging	Red light
Fully charged	Green light

7. Using the Alexa


1 Charging the WB-97

The WB-97 comes pre-charged, but you may need to charge it if it is on low battery, please use the included cable or a cable from a qualified manufacturer. It will take 2-3 hours to fully charge. Charging indicator is located between line in and charging port.

 2 Search DOSS E-go to download the app from App Store (iOS devices) from Google Play (Android devices).

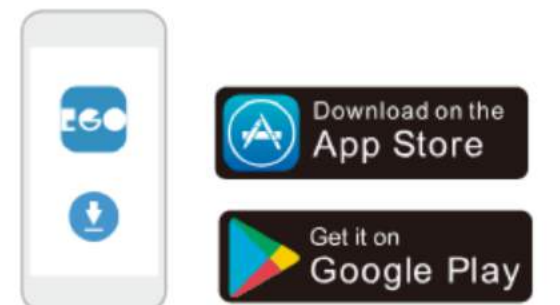


3 Pairing with smart device

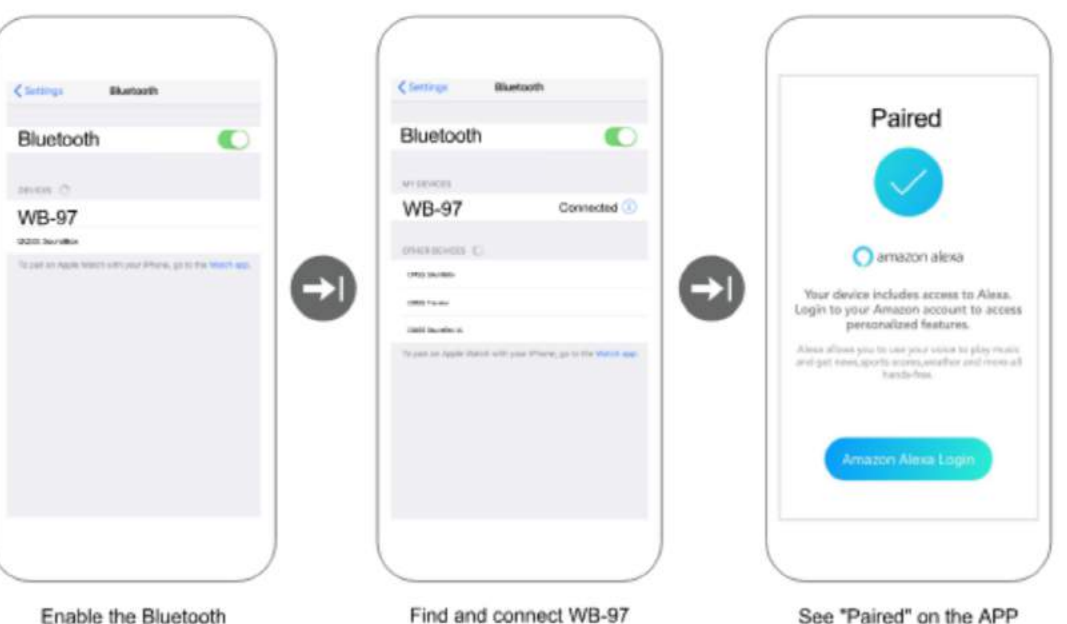

Enable the Bluetooth → Find and connect WB-97 → See "Paired" on the APP


4 Go back to the APP and follow the on-screen instructions to login with your Amazon account.

- Press the button "Wake up voice service" to activate the voice service.
- Press the button "Wake up voice service" every time first before asking your request.
- If the WB-97 slow response to commands, check if your network works well.
- When playing via line in or Micro SD card, the voice service can not be work.
- To know more skills with Alexa, go to www.amazon.com/MeetAlexa.

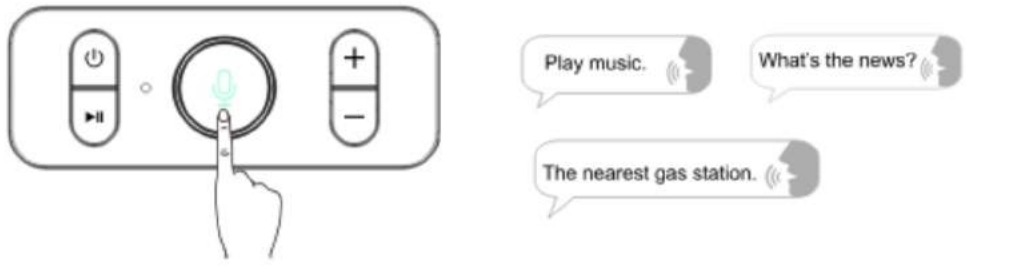

5 Connect your device with the speaker via aux cable

- When using the line in mode, control audio playback via the connected device.
- When aux cable plugged, play mode will automatically switch to line in mode.

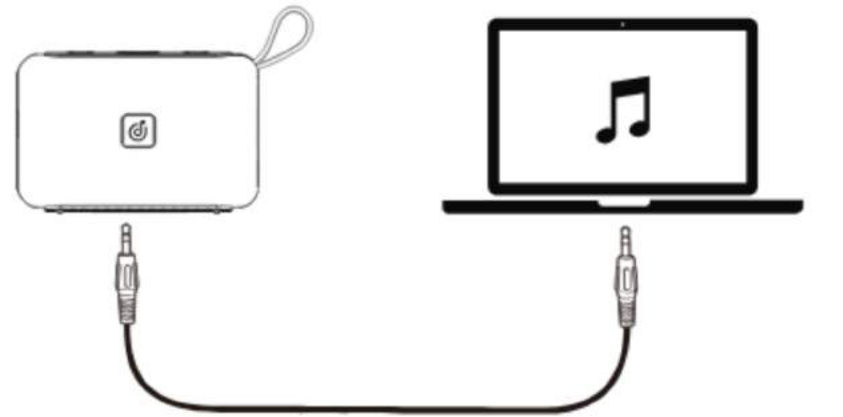


6 Play music from a Micro SD card

Card capacity: should be 32G or below, if your Micro SD card is larger than 32G, format it to FAT32 or FAT.

Support files: MP3, FLAC, WAV, WMA.

Play in order: music will play in the download/copy order.



- The Micro SD card should be inserted as seen in the diagram above.
- When the Micro SD card is inserted, the play mode will automatically switch to Micro SD card mode.

8. Trouble shooting

Symptom	Solutions
Low battery prompt tone	Recharge the speaker. For a full charge the speaker will take 2-3 hours.
Battery does not charge	<ul style="list-style-type: none"> Make sure you are using a USB cable provided by DOSS or from the qualified manufacturer. Use a different USB cable. Use a different DC plug.
Speaker does not pair with the smart device	<ul style="list-style-type: none"> On your mobile device, turn the Bluetooth feature off and on. Remove your speaker from the Bluetooth list on your device. Pair your device again. Pair to adifferent device. Clear your speaker's pairing list. Pair your device again.
Laptops reminds to install driver	The driver is not special for WB-97, it's for your laptop, contact the support of laptop or windows for help.


No sound	<ul style="list-style-type: none"> Increase the volume on your speaker, and on your device/music source. Use a different music source. Pair a different device. If two devices are connected, pause your other device. Select WB-97 as the default device on your laptop.
No sound from a cabled device	<ul style="list-style-type: none"> Make sure the device is on and playing music Increase the volume on your speaker and device. Make sure the device is properly connected through the cable. Try using a different cable. Try connecting to a different device.
Poor sound quality/ buzzing sound	<ul style="list-style-type: none"> Try using a different music source. Try pairing a different device. If there are two devices connected, disconnect the second device. Check the device's audio settings.

No response or slow response to commands

- Make sure that you download the correct APP.
- Make sure download the latest APP version.
- Make sure your network works well.
- Make sure speak to the MIC within 1 meter.
- Uninstall then reinstall the app, power the speaker Off, then On, and restart setup.

9. Warning

Do NOT drop, hit or shake the device.
 Do NOT disassemble, repair or modify the speaker.
 Do NOT use cleaning products that contain benzene, solvents or alcohol.
 Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods of time.
 Do NOT store the device in a place with high humidity or dust.
 Do NOT place heavy objects on top of the speaker.
 Do NOT use the speaker near a microwave oven or wireless LAN products.



For updates, promotions, and experience sharing,
join our customer community.

support@dossav.com 1-833-275-3677
 Mon-Fri 9AM-5PM PDT (USA)